



## EASY INSTALLATION

### How to Install:

1. Remove drain plug and drain oil
2. Hand install the valve until tight; give 1/8 turn with small crescent wrench (DO NOT OVER-TIGHTEN!)
3. Close the lever and refill with engine oil

### How to Drain Oil:

1. Lift the lever and turn counter-clockwise
2. Turn back the lever to close
3. Make sure the lever is fully-closed and secured in its locked position

(Adapter may be required for recessed oil pans.)

\* Note: **O-rings** NOT required for (i.e. EZ-200, EZ-201, EZ-202, EZ-110, & EZ-115) as they are self-tightening tapered threads

\* For users under extreme conditions such as off-road vehicles, agricultural tractors, and logging equipment (i.e. corn fields, brush areas), it is advised that a hose clip as shown below be applied for additional safety and security. Hose clips can be purchased at any hardware store and will securely keep the lever closed in the locked position at all times.

