KW BRACKET MOUNT 2 PC VISOR INSTRUCTION


13 Inch Stainless Steel Blind Mount Drop Visor Fits Kenworth T600, T800 & W900

NOTE : ALL VISORS SHOULD BE TEST FIT TO THE TRUCK BEFORE PAINT / INSTALLATION

Bracket # 0345:

00*2ea	06*1ea
01*1ea	07*1ea
02*1ea	08*1ea
03*1ea	09*1ea
04*1ea	
05*1ea	11*1ea


1. Remove factory visor and brackets.
2. Drill out factory holes to 1/2”.
3. Drill 1/2” holes for additional brackets.
4. Install new brackets in factory locations.
5. Fasten visor to brackets.

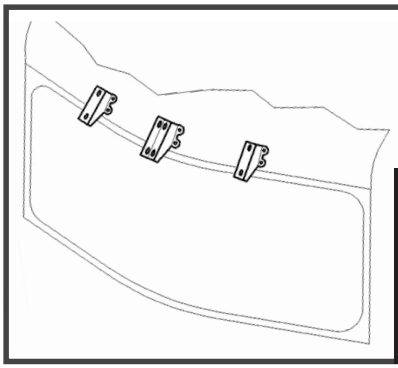


THIS VISOR WILL ONLY WORK ON TRUCKS WITH 3 FACTORY BRACKETS.


***DOES NOT FIT TRUCKS WITH FACTORY FIBERGLASS VISOR OR 2 BRACKET VISOR**

3 Additional brackets

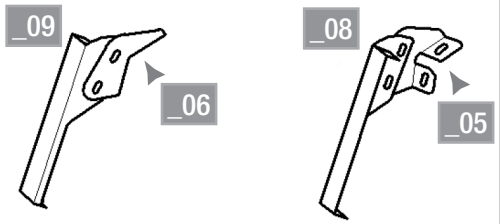

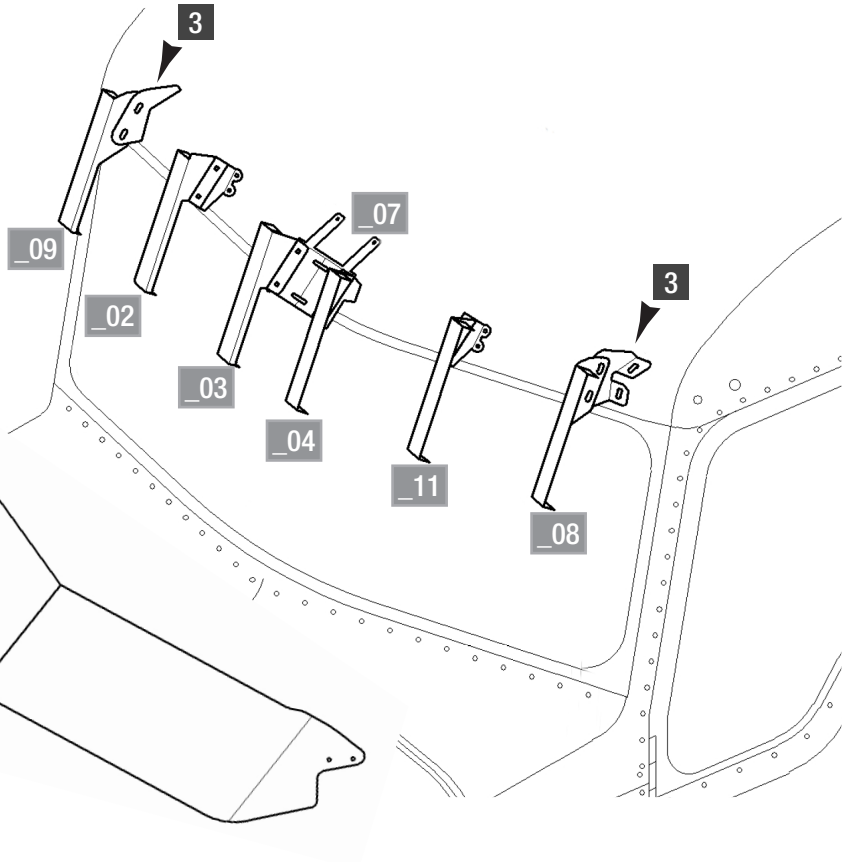

SIDE VIEW

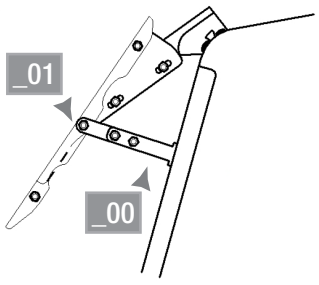

Rests on windshield

SAFETY WARNING & PRECAUTIONS

READ CAREFULLY AND UNDERSTAND ALL ASSEMBLY AND OPERATION INSTRUCTIONS BEFORE OPERATING. FAILURE TO FOLLOW THE SAFETY RULES AND OTHER BASIC SAFETY PRECAUTIONS MAY RESULT IN SERIOUS PERSONAL INJURY.

GENERAL SAFETY RULES



WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.
CAUTION: Do not allow person to operate or assemble this Kit until they have read these Instructions and have developed a thorough understanding of how the Kit works.

WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors that cannot be built into this product, but must be supplied by the operator.

IMPROPER USE

Any use of the parts for purposes other than that intended is deemed improper. 4 State Trucks shall not be liable for damage to persons or property resulting from improper use.

PERSONAL PROTECTIVE EQUIPMENT

If required, wear personal protective equipment.
The personal protective equipment consists of

- safety footwear
- protective gloves
- safety glasses
- hard hat
- hearing protection

The personal protective equipment must be suitable for the pressurised medium.

4 State Trucks

4579 Highway 43, Joplin, MO 64804

Chrome & Accessories: **888-875-7787**
Collision Parts: **855-220-8608**
Fax: **417-624-2489**

HOURS
8 AM - 5 PM (Mon - Fri)
9 AM - 3 PM (Sat)
Closed (Sun)

LIABILITY & WARRANTY

LIMITATIONS OF LIABILITY

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall the manufacturer and 4 State Trucks or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damages.

WARRANTY

1 Year Limited Warranty

We warranty listed parts to be free from defects in material and workmanship for the period specified on your invoice. It begins from the date purchased. This warranty does not apply to parts unless the installation instructions are followed in their entirety. Air Ride Kit and Flip/Lift Bumper Kit Installation should be performed by a licensed mechanic.

LIMITATIONS OF WARRANTY

This warranty does not cover any expenses incurred in the removal and / or reinstallation of the part. Specifically, this warranty does not cover any expenses for time, or other parts not purchased from us, or any labour. This warranty covers fixing or replacing the part only.
This warranty is offered only to the original purchaser of the part.
This warranty does not apply, and will be voided, if the part sold has been damaged by abuse, misuse, accident, neglect, modification, or alteration, or if it has been repaired or replaced by anyone other than us.
This warranty does not cover damages caused by the use of parts of different manufacturers.
Your warranty will be null and void if the part fails due to improper installation. If the part sold should prove defective in material or workmanship within the warranty period, return the part to us, along with your sales invoice. (Shipping/freight charge will not be covered by us.) Your dated invoice will establish your eligibility for the warranty. We will, at our option, replace or repair the part free of charge.

This warranty does not apply to normal wear and tear.
Wear and tear parts are identified as:
Scratches
Surface damages
Hardware and seals
Bearings
Corrosion
Stripped threads/bolts
Hinges