
BEFORE BEGINNING INSTALLATION, READ ALL INSTRUCTIONS

INSTALLATION INSTRUCTIONS

1- INSTALL THE BRACKETS ONTO THE SUN VISOR.
2- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB.
3- USING THE SUN VISOR, MARK OUT BRACKETS AND BOTH ENDS HOLES OF SUN VISOR.


ATTENTION
REMOVE SUN VISOR TO PREVENT DAMAGE

4- DRILL THE PREVIOUSLY MARKED OUT HOLES AT ½ IN. DIA.
5- INSERT THE WELLNUTS.
6- REINSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.
7- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

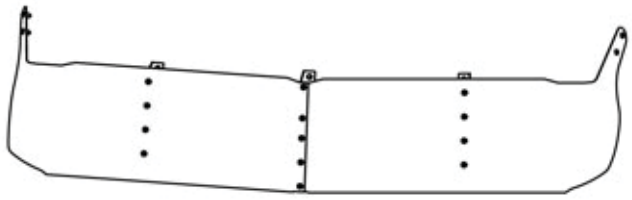

TITLE:
SUN VISOR FREIGHTLINER
COLUMBIA DAY CAB 2001 & UP

SIZE	DWG. NO.			
A	TSUN-F24			
	NAME	DATE	REV	DATE
DRAWN BY	P.W.	27-03-2007	PH2	-
SCALE: 1:24		WEIGHT: LBS		SHEET: 1 OF 1

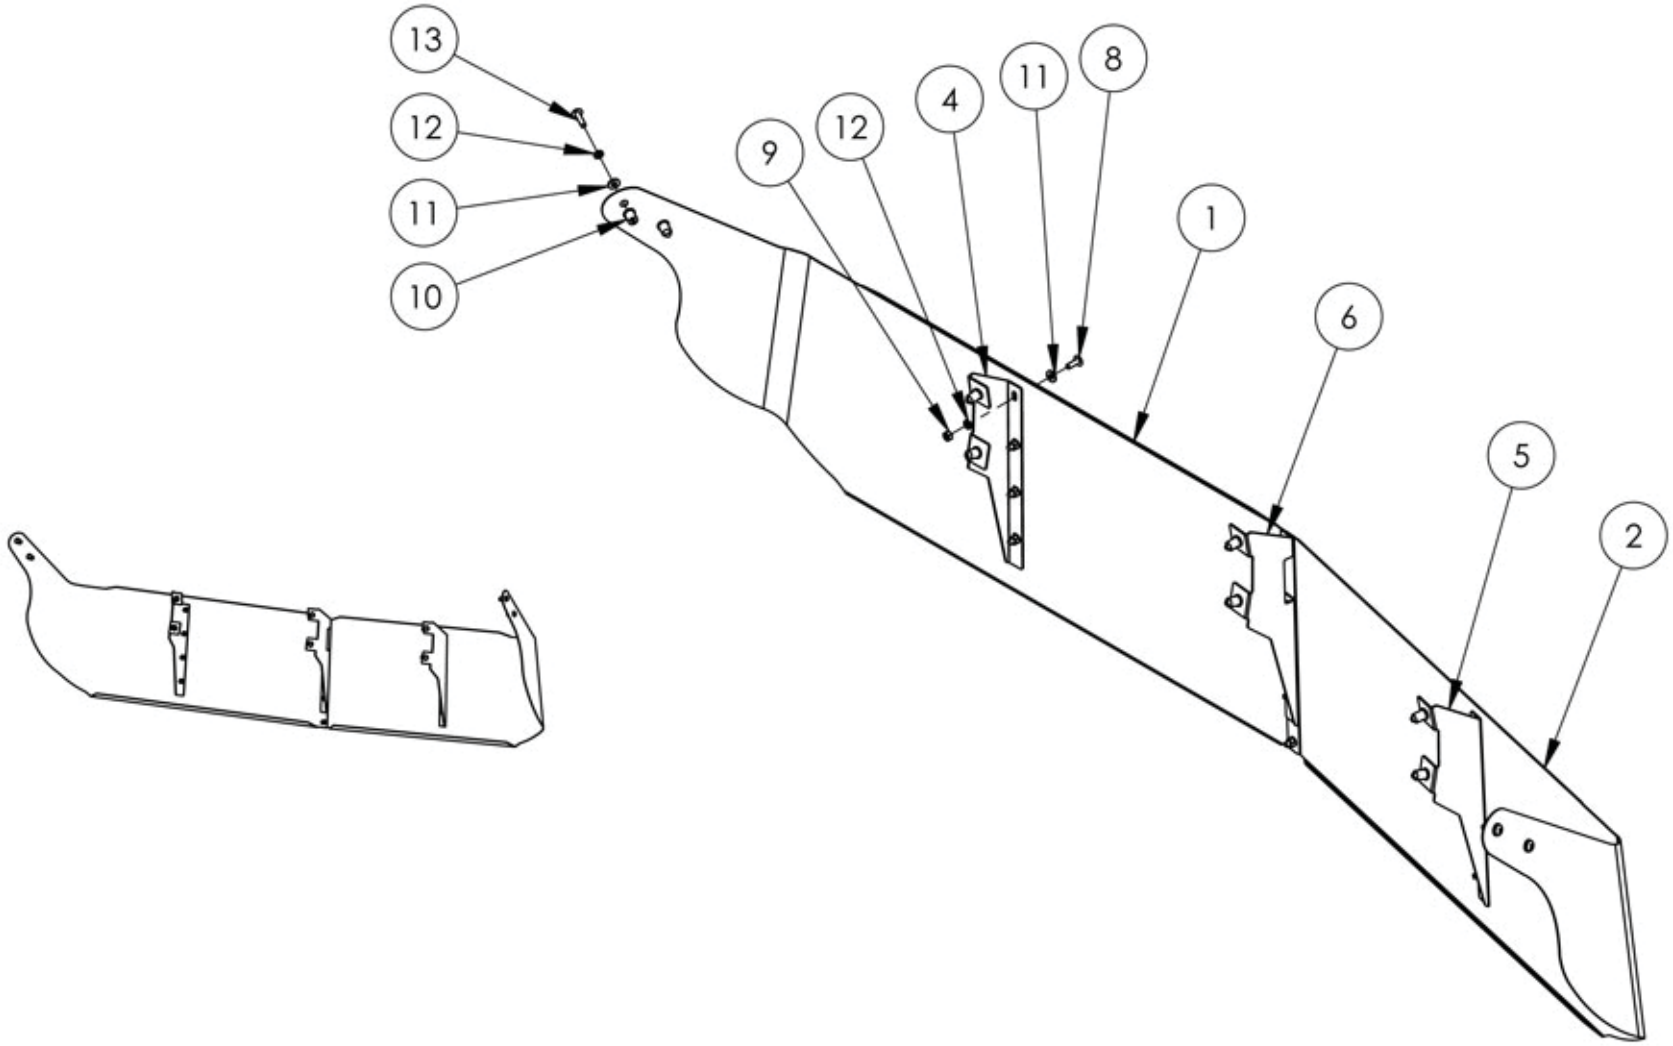

ITEM NO.	PART NO.	MATERIEL	DESCRIPTION	QTY
1	M7331026SG	M7331029SG	SUN VISOR PANEL	1
2	M7331026SD	M7331029SD	SUN VISOR PANEL	1
3	K7331026BH	-	HARDWARE KIT INCLUDES:	1
4	-	-	CL9331026-D00	1
5	-	-	CL9331026-G00	1
6	-	-	CL9331026-C00	1
7	-	-	HEX. BOLT 1/4NC X 1	6
8	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	13
9	-	-	HEX NUT 1/4-20NC	13
10	-	-	WELL NUT 1/4NC	10
11	-	-	FLAT WASHER 1/4"	23
12	-	-	LOCK WASHER 1/4" SS	23
13	-	-	TRUSS HEAD SCREW 1/4NC X 1	4

TITLE:
SUN VISOR FREIGHTLINER
COLUMBIA DAY CAB 2001 & UP

SIZE A | DWG. NO. **TSUN-F24**

	NAME	DATE	REV	DATE
DRAWN BY	P.W.	27-03-2007	PH2	-
SCALE: 1:10		WEIGHT: LBS		SHEET: 1 OF 1