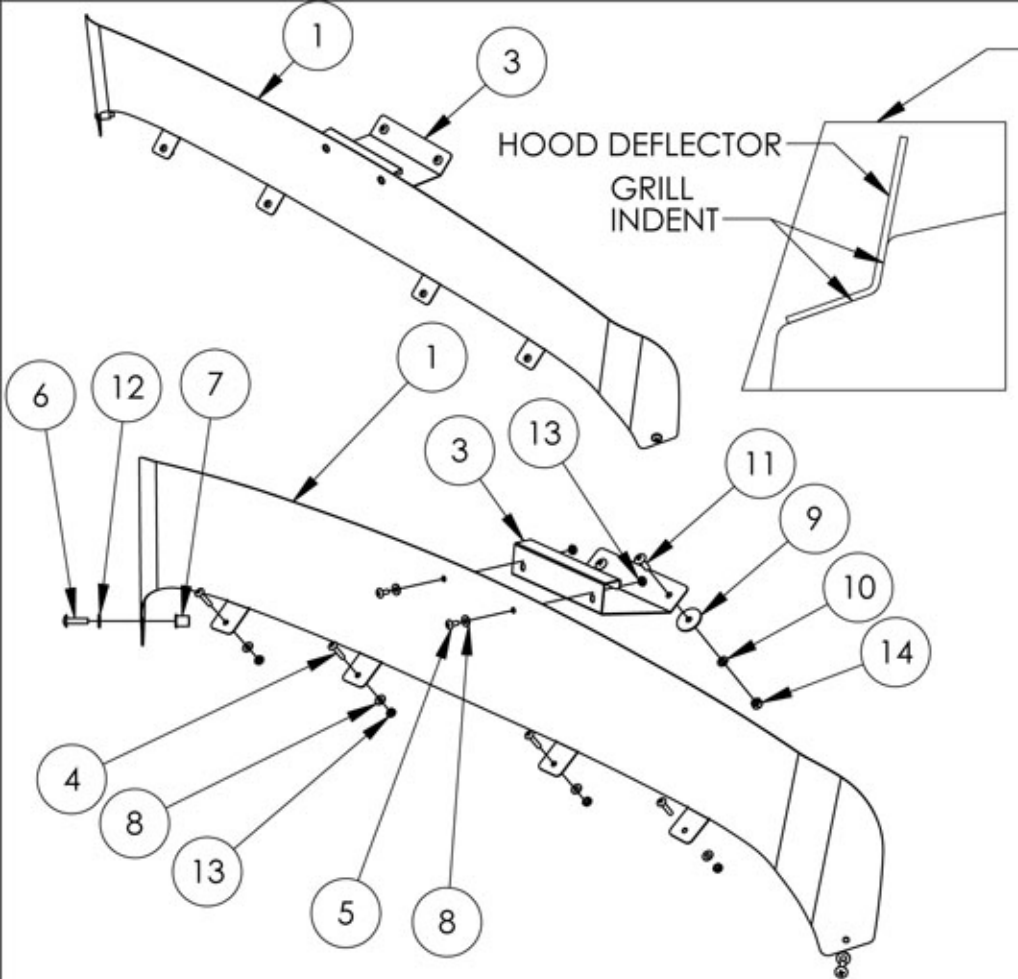


INSTALLATION INSTRUCTIONS

1- REMOVE GRILL
2- PLACE THE HOOD DEFLECTOR, MAKING SURE IT IS CENTERED ON THE HOOD AND LEANING ON GRILL INDENT. **NOTE 2**
3- MARK THE TABS AND SIDES HOLES ON THE HOOD.

CAUTION
BEFORE DRILLING,
REMOVE THE HOOD DEFLECTOR
TO PREVENT DAMAGE

4- DRILL THE TABS HOLES AS MARKED AT 7/32"DIA. (.21875")
5- DRILL BOTH SIDES HOLES MARKED AT 9/32" DIA. (.28125")
6- INSTALL THE HOOD DEFLECTOR AS ILLUSTRATED.
7- TEMPORARILY ATTACH THE HANDLE TO THE HOOD DEFLECTOR WITH HARDWARE AS ILLUSTRATED.
8- MARK THE HANDLE HOLES ON THE HOOD.

CAUTION
BEFORE DRILLING,
REMOVE THE HOOD DEFLECTOR HANDLE
TO PREVENT DAMAGE

9- DRILL THE HANDLE HOLES AS MARKED AT 9/32" DIA. (.28125")
10- FASTEN THE HOOD DEFLECTOR HANDLE ONTO THE HOOD AS ILLUSTRATED.
11- TIGHTEN ALL BOLTS AND SCREWS.
12- REINSTALL GRILL.

* NUMBER ON PARTS MAY BEGIN WITH «CL» INSTEAD OF «PR»

ITEM No.	PART NUMBER	DESCRIPTION	QTY
1	M7321005SC	HOOD DEFLECTOR	1
2	K7321005BH	HARDWARE KIT INCLUDE:	-
3	-	* PR7321005-C01 (HANDLE)	1
4	-	TRUSS HD. SCREW #10-32 X 1"	4
5	-	TRUSS HD # 10-32 x 1/2"	2
6	-	TRUSS HEAD SCREW 1/4NC X 1	2
7	-	WELL NUT 1/4NC	2
8	-	FLAT WASHER #10	6
9	-	FLAT WASHER 1/4" D.I. X 1" D.E.	2
10	-	LOCK WASHER 1/4	2
11	-	TRUSS HD. SCREW 1/4NC X 3/4	2
12	-	FLAT WASHER 1/4"	2
13	-	HEX. NYLOCK NUT #10-32	6
14	-	HEX NUT 1/4-20NC	2

TRUX ACCESSORIES

TITLE:
HOOD DEFLECTOR
FREIGHTLINER - COLUMBIA 2001 & UP

SIZE A | **THOD-FLCOL**

	NAME	DATE	REV	DATE
DRAWN BY	P.W.	16-10-2008	PH2	-
SCALE: 1:9		WEIGHT: LBS		SHEET: 1 OF 1